


# RODFLEX - Junior Bracket Installation Instructions

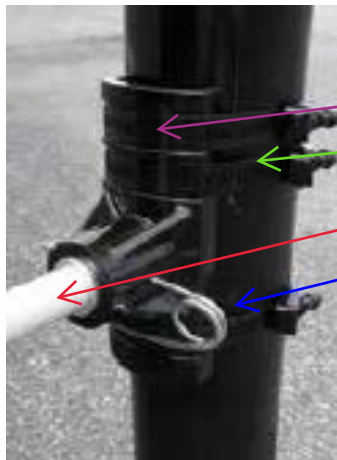

## Each banner bracket set consists of:

- 2 - Cast Aluminum Brackets
- 4 - 39" Stainless Steel Bands
- 2 - Fiberglass Arms
- 2 - Safety Pins
- 2 - Tie Wires

### **Step 1:**

Insert the aluminum sleeve side of the fiberglass arm into the bracket and line up the holes so the safety pin can be inserted and fastened.

It is **VERY IMPORTANT** to position the bracket with the arrows pointing toward the banner. The banner arms are designed with a slight angle to keep more tension on the outside edge of the banner, if they are installed wrong, the banner will not hang properly.

### **Step 2:**

Each bracket is designed for 3 - 39" bands. If your banners are small, 18"-24" wide, you may have received only 2 bands per bracket. Lift the screw straight up on the band to quickly pull through the band until it is snug, push the screw down against the slots and tighten the screw snug but do not over tighten. Trim the excess banding using tin snips.

### **Notes:**

Suggested height of bottom bracket should be a minimum of 14' high on the street side for proper traffic clearance, **consult with relevant parties regarding minimum clearance heights in your community.** The area on the pole where the banner is located should be free of anything that might come in contact with the banner and eventually cause a tear.

### **Step 3:**

Secure the top bracket first and slide the banner on with the grommet side towards the pole. Next slide the bottom arm and bracket into the bottom banner sleeve and pull the bracket down to fasten the bands. Remember to face the arrows on the bracket toward the banner for both the top and bottom brackets.

### **Step 4:**

Pass the tie wire through the grommet of the banner and the closed loop on the safety pin to secure the banner onto the bracket.

Scan the QR Code to view our  
Banner & Bracket Installation Video



**(877) 444-8888**  
**HolidayOutdoorDecor.com**