



DS-13-LUWT


Lumi Walk Thru

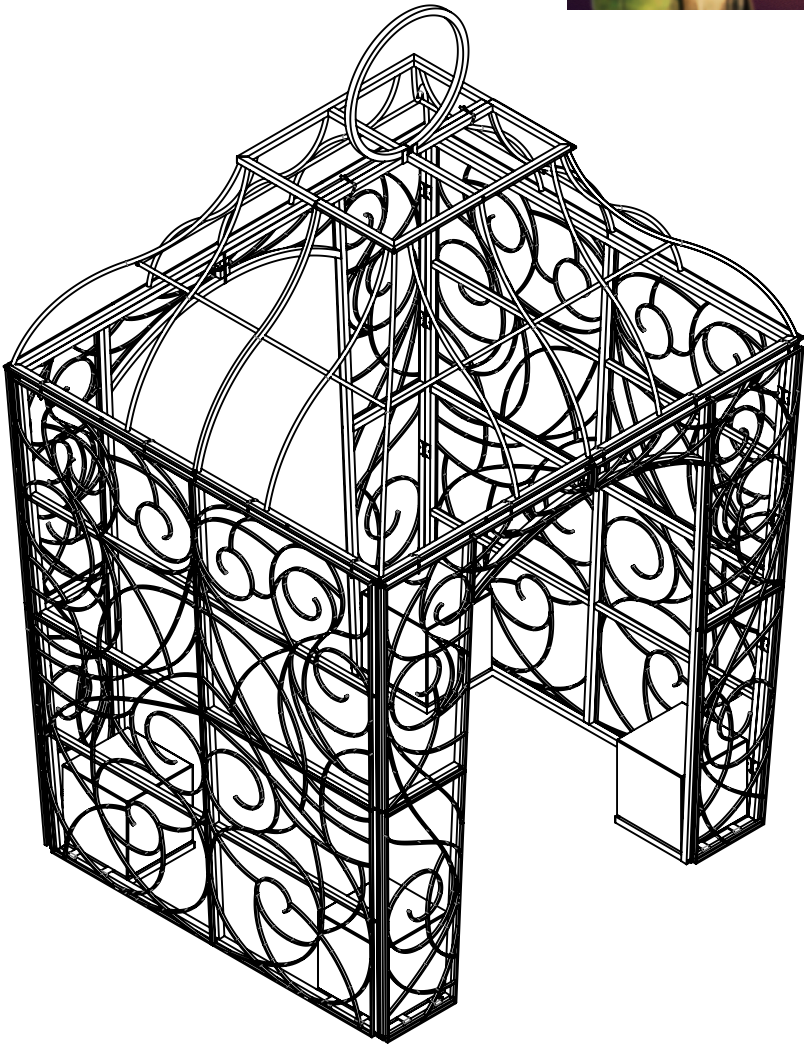


	Lumi			
	DS-13-LUWT	Mounting instruction		
	M.Boucaud	20/12/2021	1:30	1/6

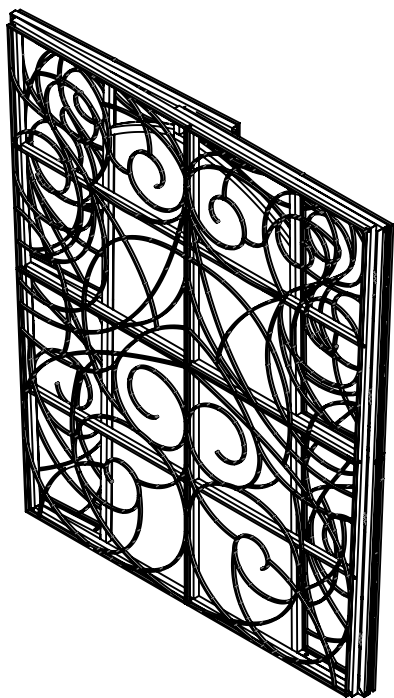


2 x Side

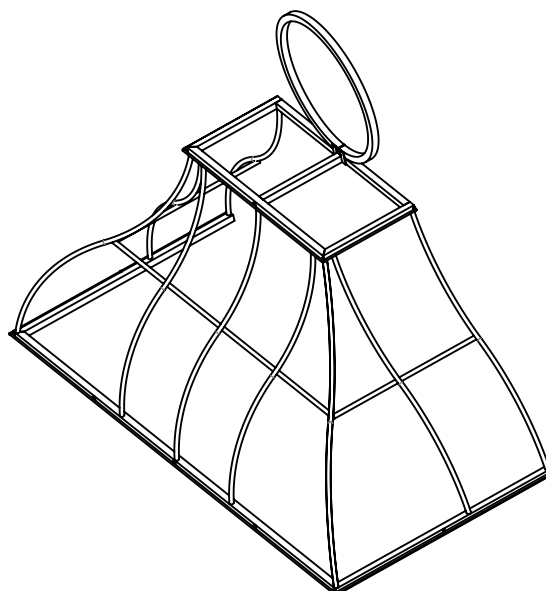


1 x Hat 1

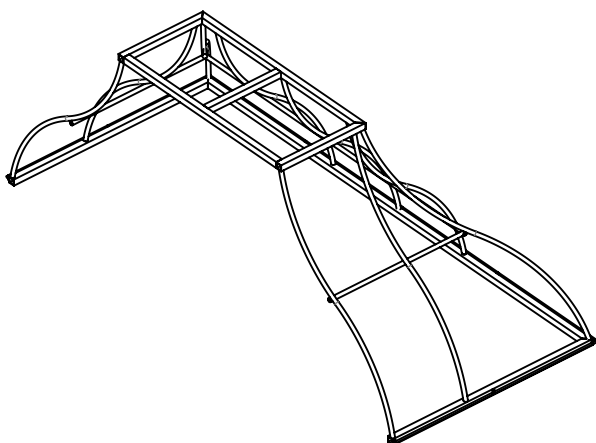

1 x Hat 2

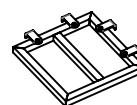



4 x Balasting base

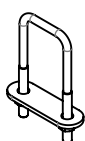

Flat bottom clamp


	Lumi			
	DS-13-LUWT	Mounting instruction		
	M.Boucaud	20/12/2021	1:30	2/6

Step 1: Position a side panel, then open it.

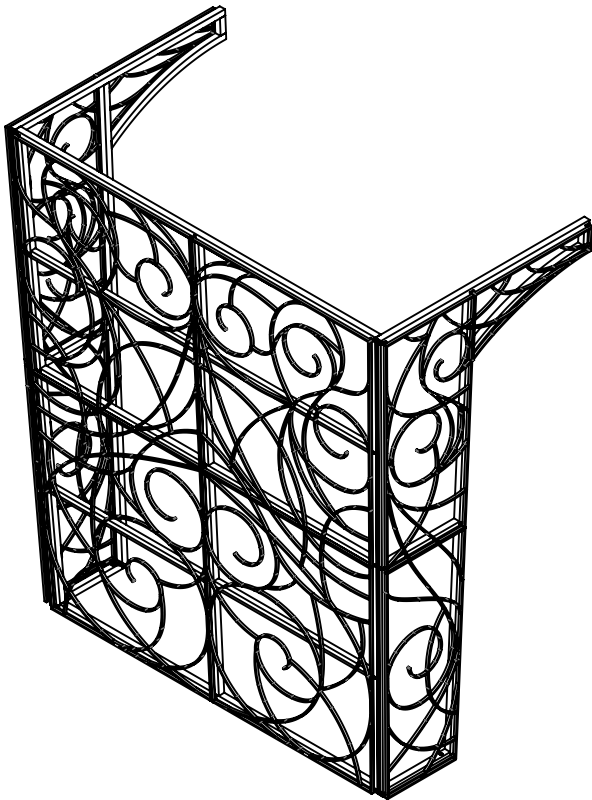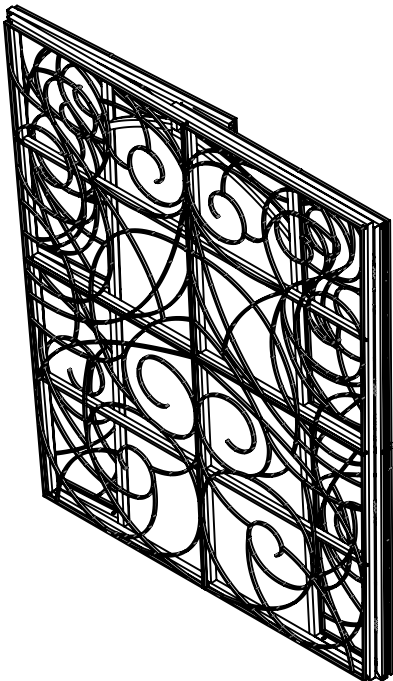


	Lumi			
	DS-13-LUWT	Mounting instruction		
	M.Boucaud	20/12/2021	1:30	3/6

Step 2: Open the second side in the same way. Assemble them with one clamp on each side.

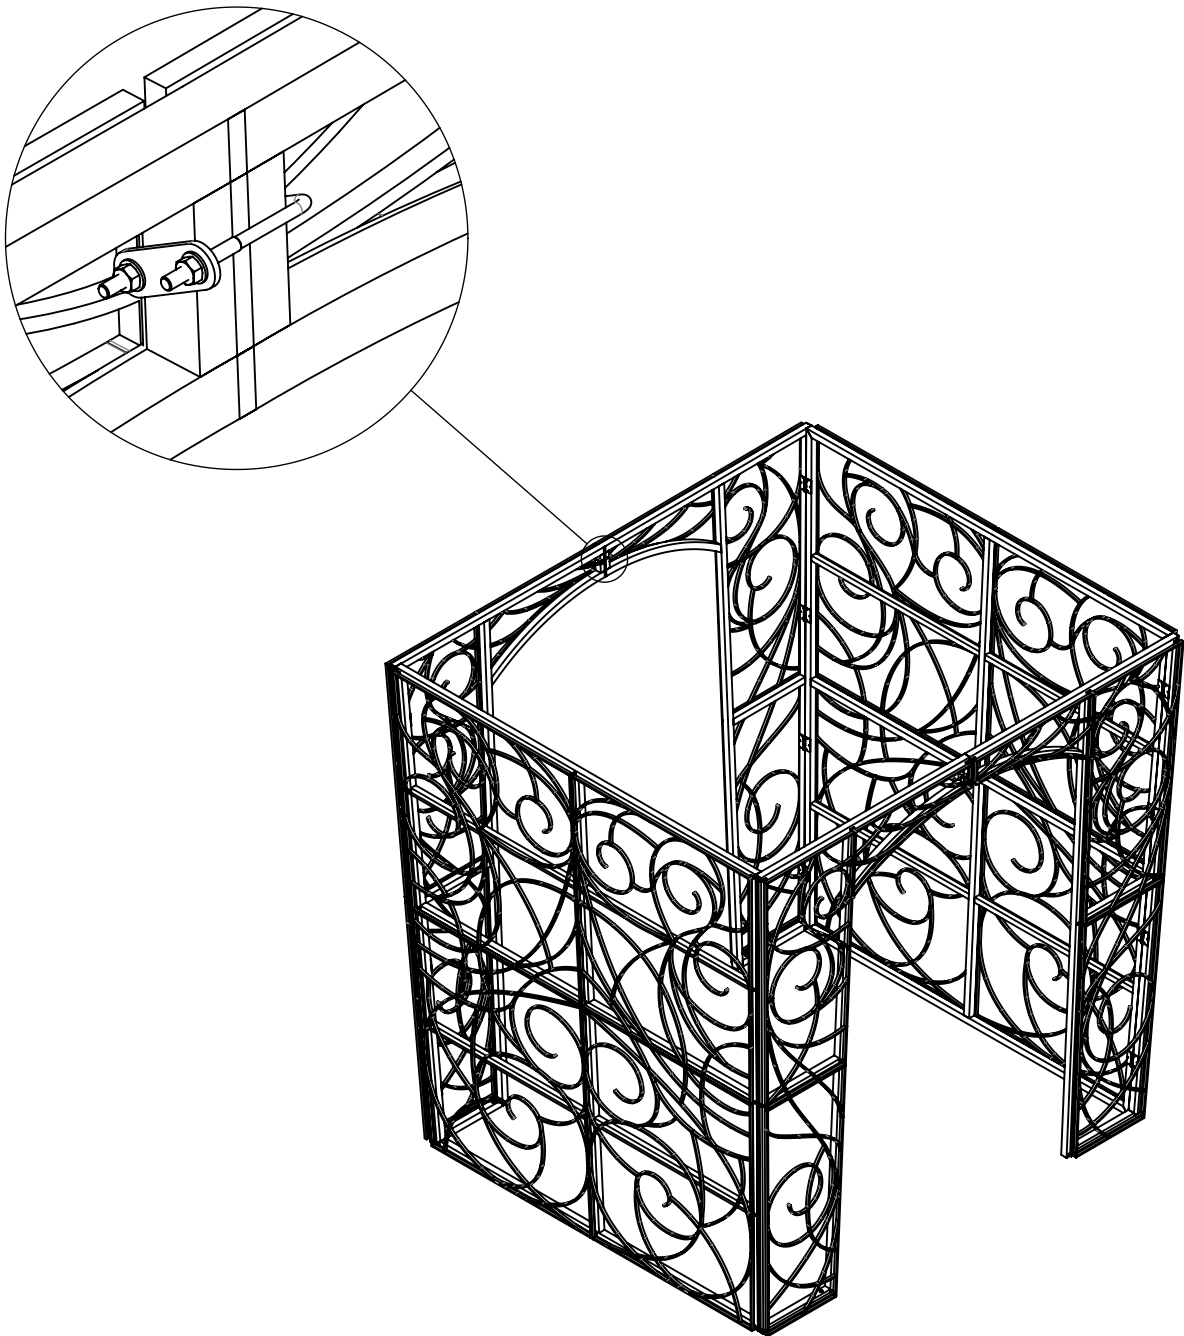

	Lumi			
	DS-13-LUWT	Mounting instruction		
	M.Boucaud	20/12/2021	1:30	4/6


Step 3: Position a ballasting support at each corner. Place a ballasting block of at least 100kg* on each support.

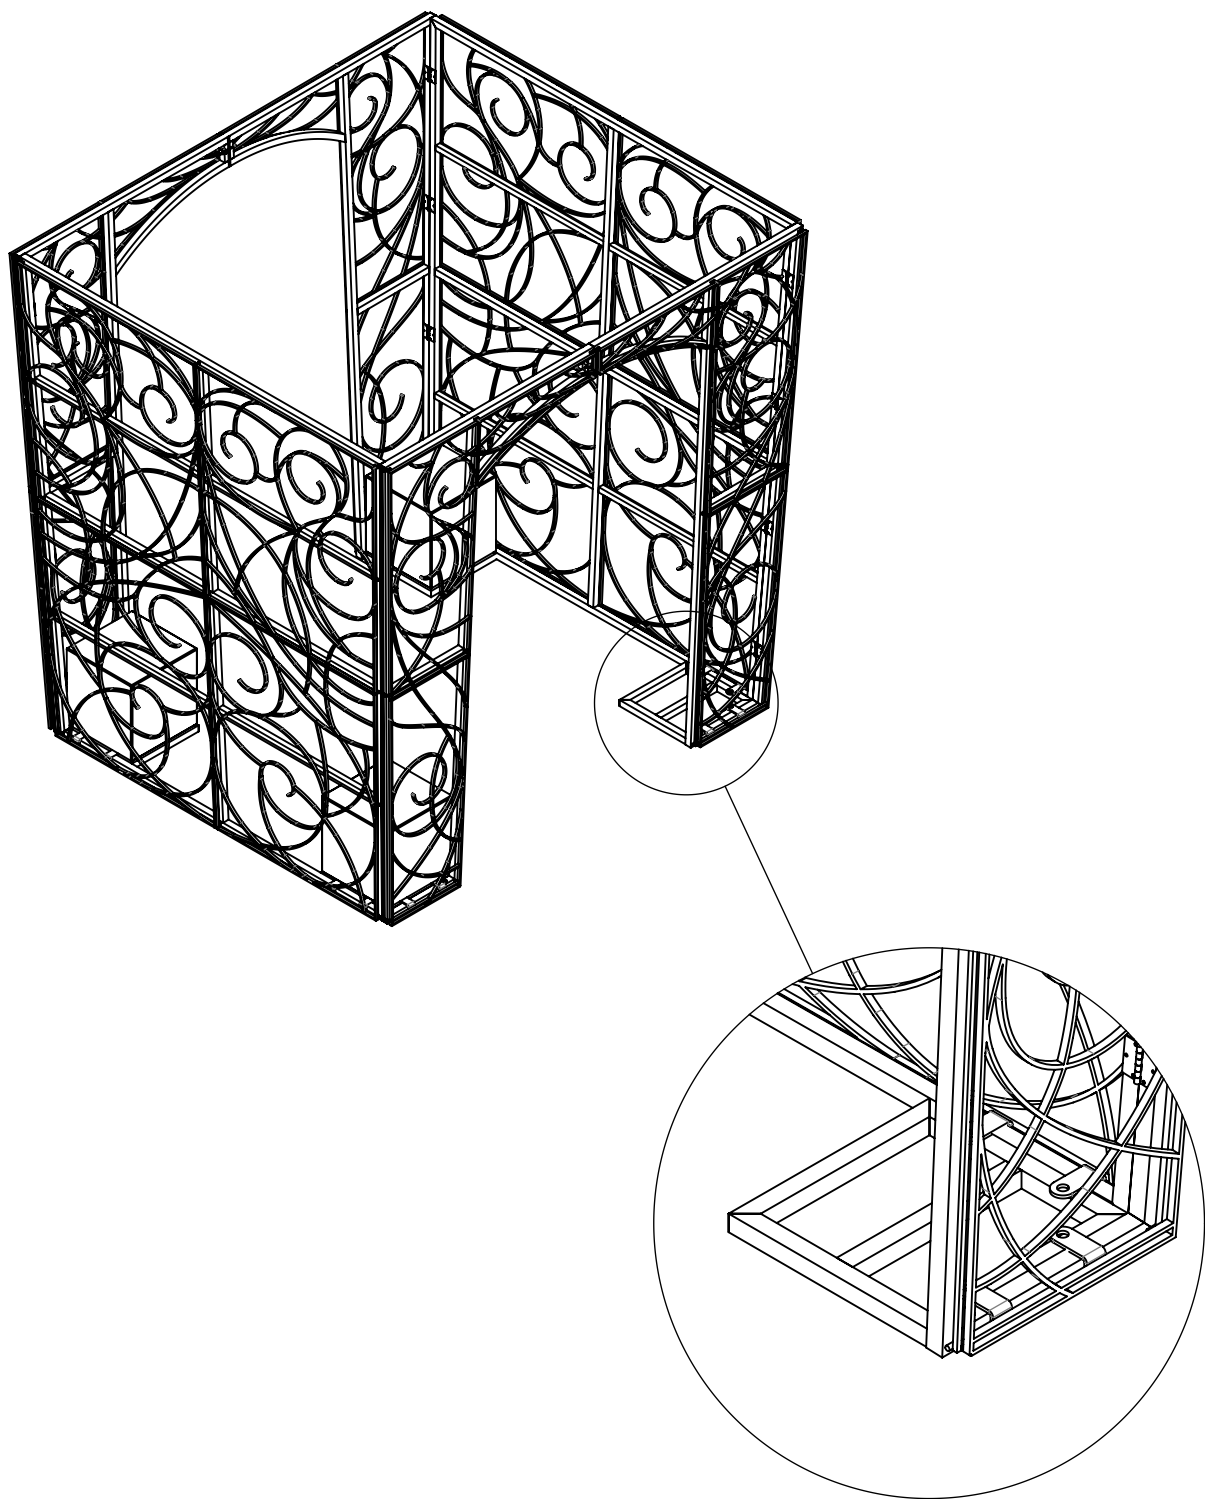

* Weight for a 3-lb wind area
The ballasting can vary according to the region.

	Lumi			
	DS-13-LUWT	Mounting instruction		
	M.Boucaud	20/12/2021	1:30	5/6

Step 4: Position the two elements of the cap and assemble them with clamps.

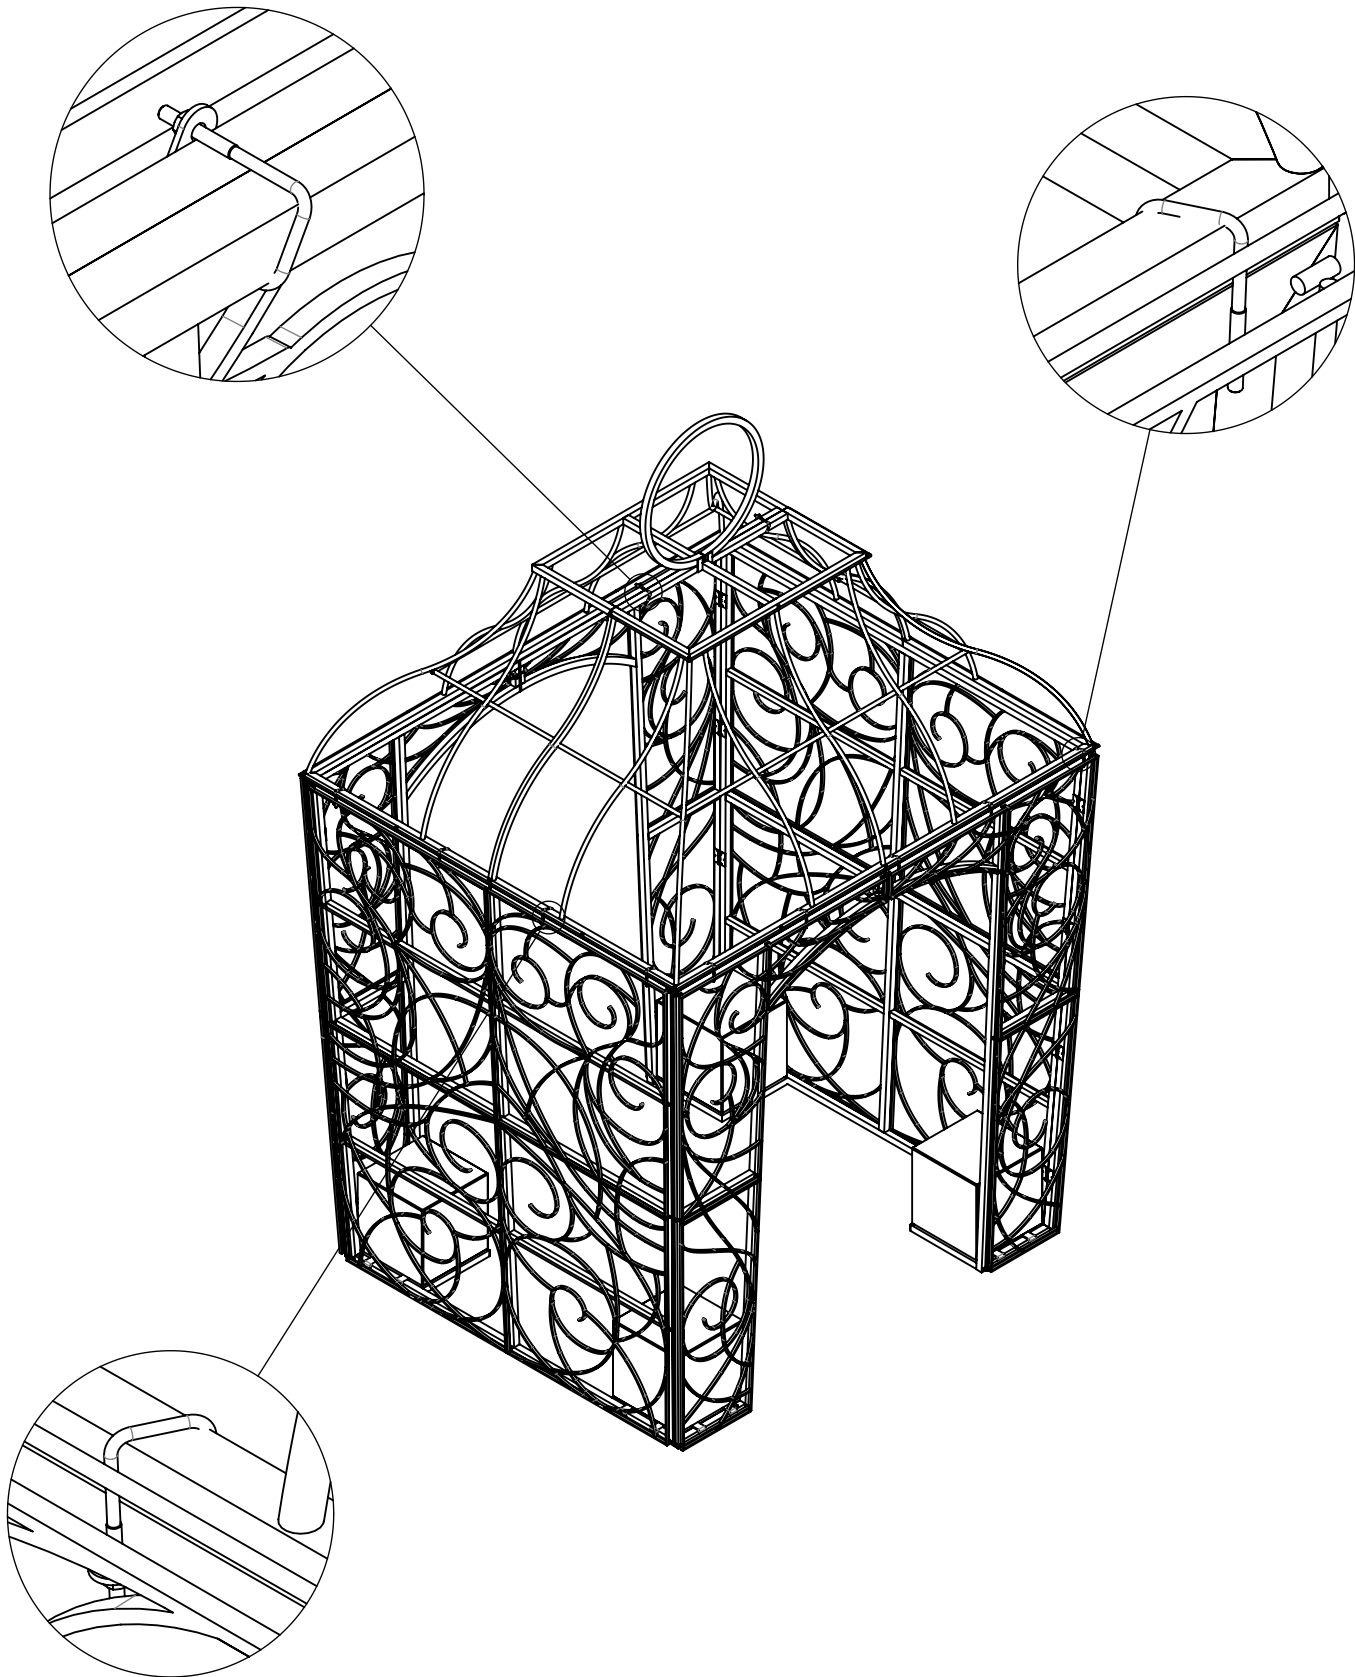

	Lumi			
	DS-13-LUWT	Mounting instruction		
	M.Boucaud	20/12/2021	1:30	6/6