
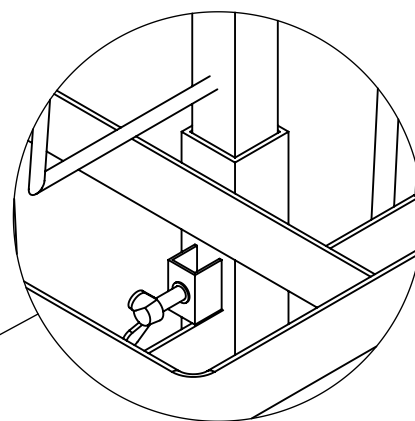


Sleeve the tree trunk in the pot structure.
 Lock with the pressure screw.
 Put in place and secure at the top on the facade.
 Fill the pot with 175 kg* of ballasting (sand, gravel...)

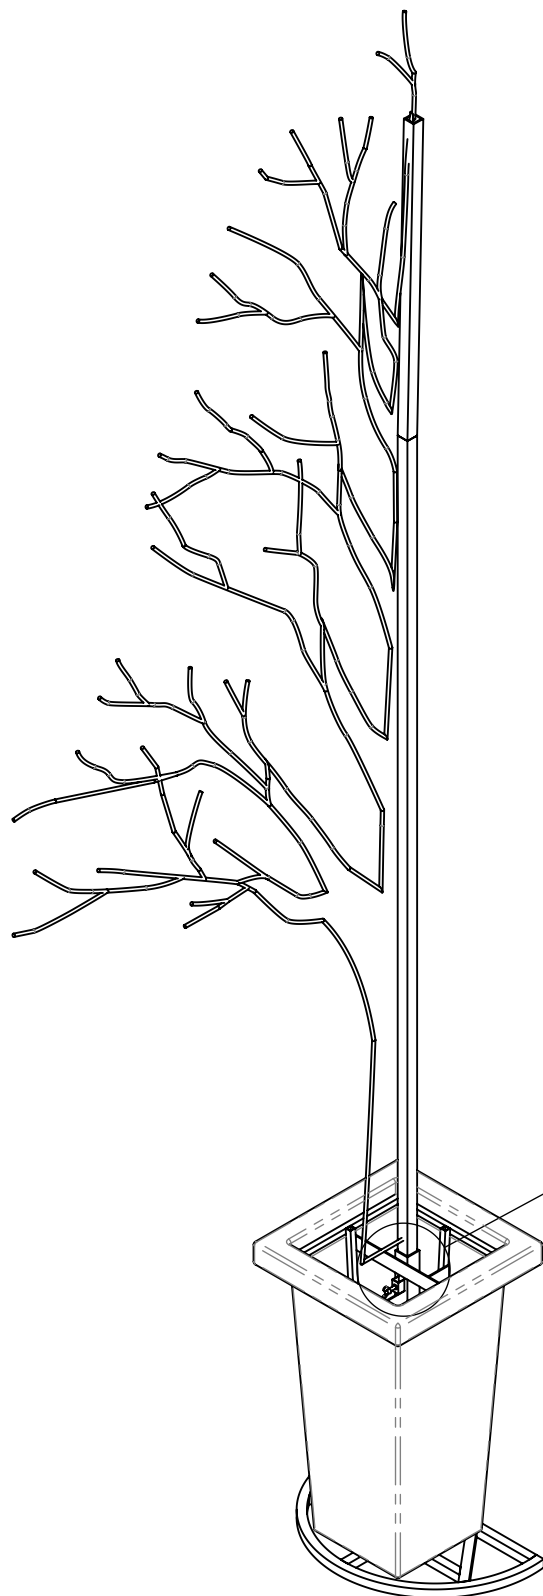

* Weight for a 3-IIIb wind area (see Eurocode)
 The ballasting can vary according to the region.

| | | | | |
|---|------------------|------------|----------------------|-----|
|  | Bjork Side Mount | | | |
| | DS-16-BFT | | Mounting instruction | |
| | M.Boucaud | 27/01/2021 | 1:22 | 1/1 |