


DS-6-STA, DS-8-STA, DS-12-STA

INSTALLATION / BALLASTING :

Bolt the two branches to the base.

Then assemble the two parts by bolting the two branches together at the top.

Finalize by placing the required weight* on the frames as shown below :

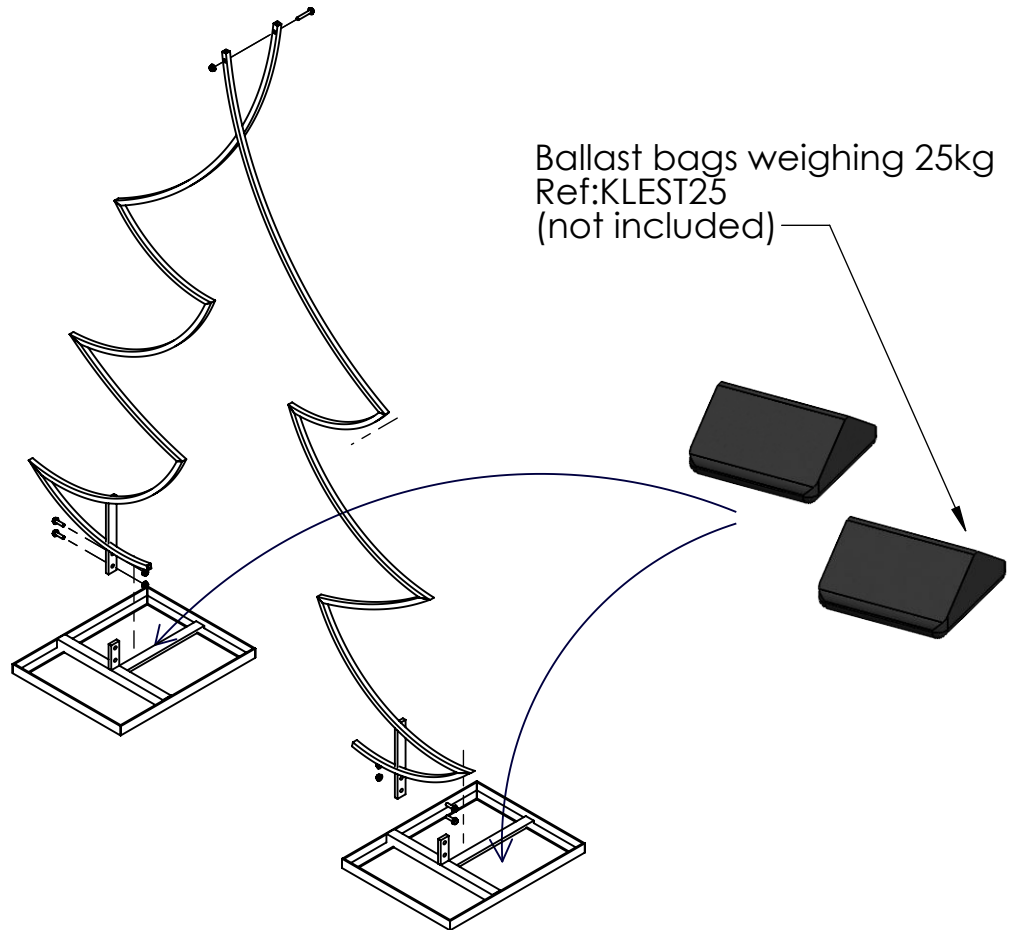

*Required Ballast :

The ballast weight depends on the geographic location and roughness of the terrain :

Zone 3 Roughness IIIb : **25 kg** (1 bags weighing 25 kg each, at each base)

Zone 3 Roughness 0 : **50 kg** (1 bags weighing 25 kg each, at each base)

WARNING : Weight specified only for the given geographic wind zone and terrain roughness.

High exposed zone may require higher ballast weight.

Consult Blachere-Illumination if any doubts on geographic wind zone and terrain roughness.

	Sylvestre			
	Mounting Instruction			
	C.OCCELLI	12/12/2023	1:20	1/1