

DS-7-DSJD




INSTALLATION / BALLASTING :

Place the decor at desired location.

Anchor the latter to the mounting brackets provided on the chassis.

Sleeve and plug the woods.

In the absence or in impossibility to anchor the frame, place on it the required weight of ballast with concrete blocks and/ or bags of ballast (not included).

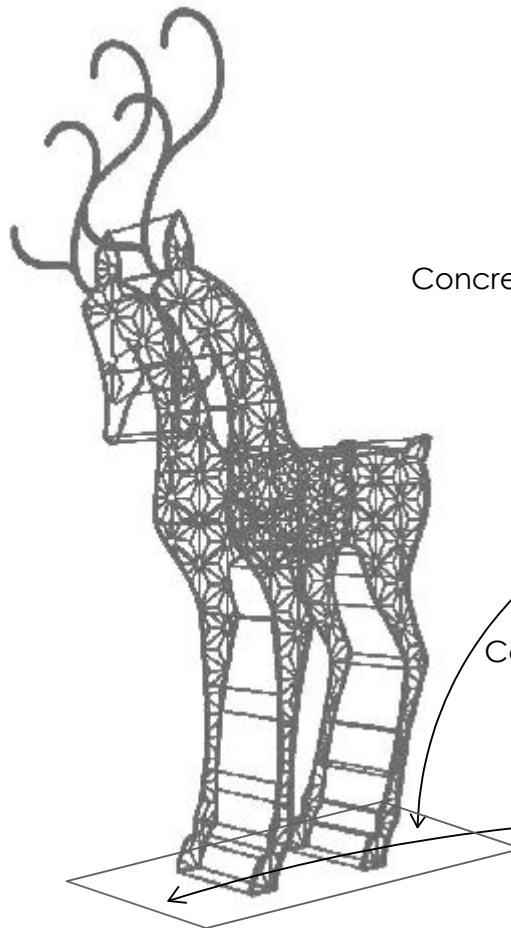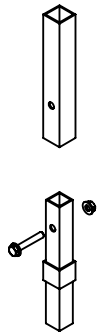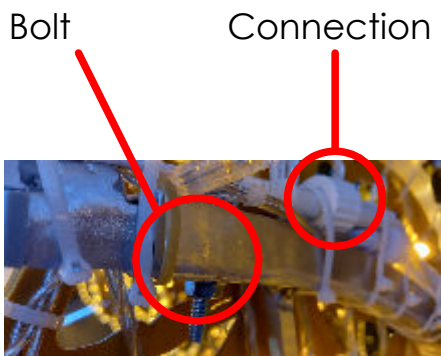

Concrete block 20 kg
Ref KPLO020
Not included



Concrete block 40 kg
Ref KPLO040
Not included



* Required Ballast :

The ballast weight depends on the geographic location and roughness of the terrain :


Zone 3 Roughness IIIb : **220 kg** (5 blocks weighing 40 kg and 1 of 20 kg)

Zone 3 Roughness 0 : **350 kg** (1 block weighing 250 kg and 5 of 20kg or 9 blocks weighing 40 kg)

WARNING : Weight specified only for the given geographic wind zone and terrain roughness.

High exposed zone may require higher ballast weight.

Consult Blachere-Illumination if any doubts on geographic wind zone and terrain roughness.

	José			
	DS-7-DSJD	Mounting instruction		
	T. Ortega	18/09/2023	1:20	1/1