


Assemble all the different parts together following instructions bellow. The body might be already assembled on the sledge.
 Bolt directly on the ground or ballast with 75 kg*.

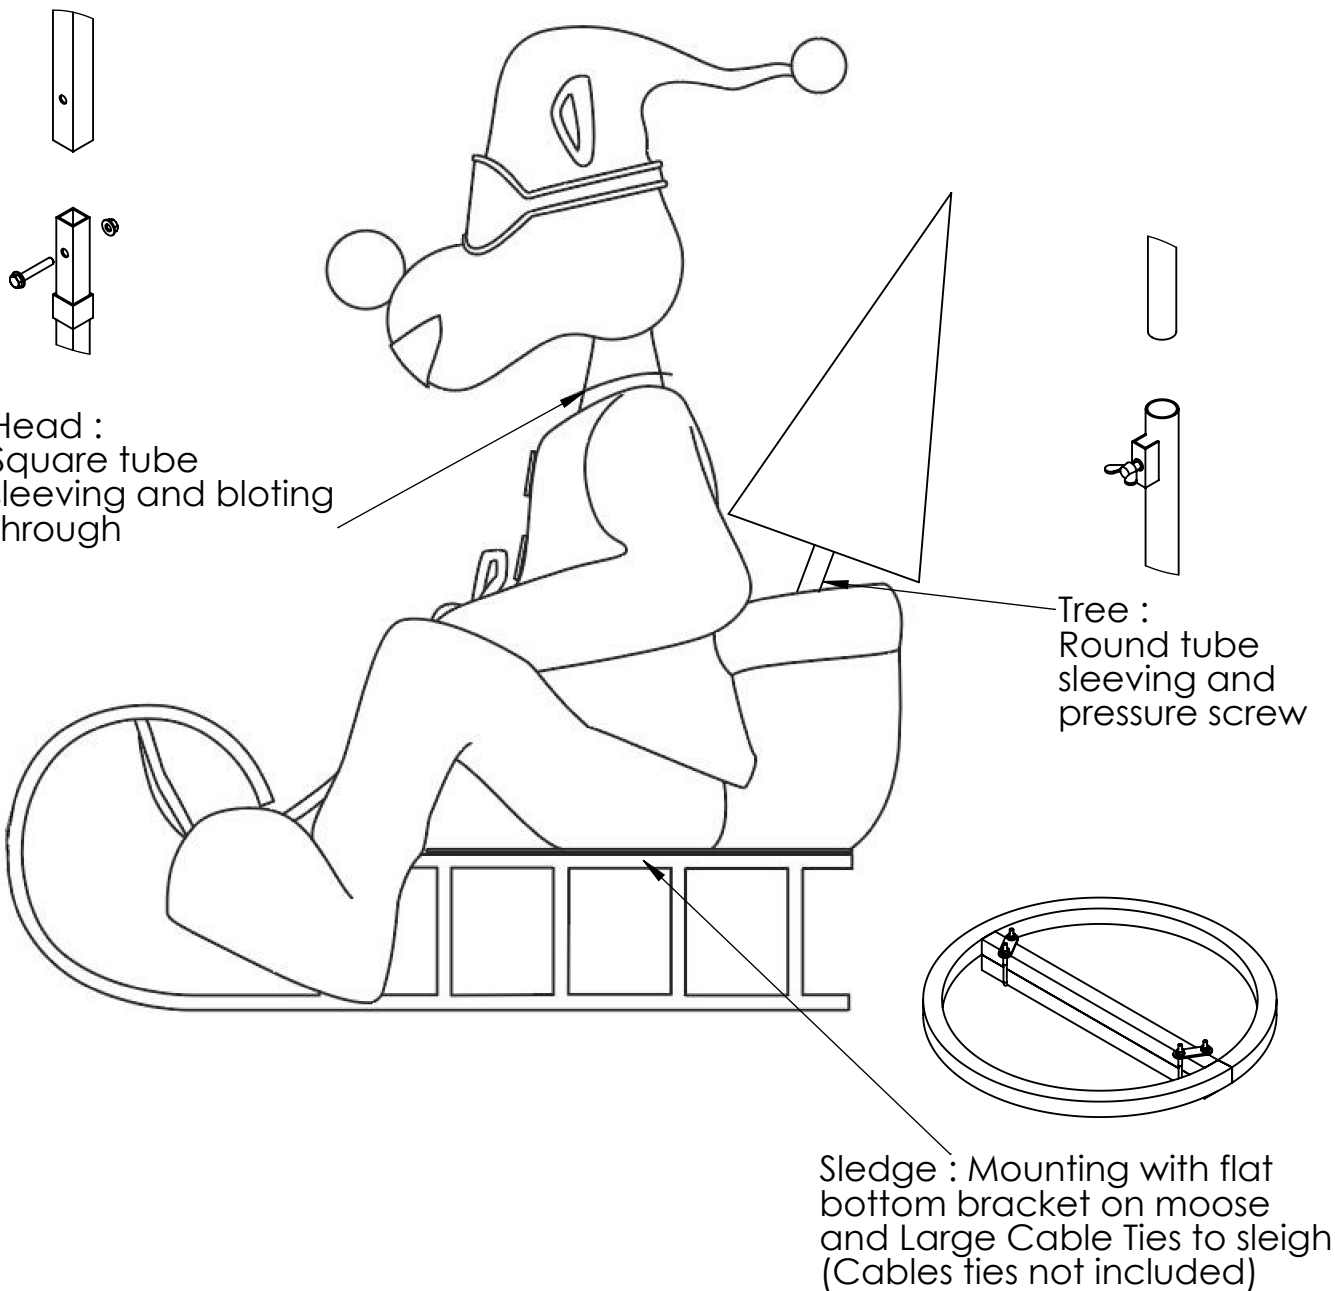

* Weight for a 3-lb wind area (see Eurocode)
 The balasting can vary according to the region.

	Tommy			
	Mounting instructions	DS-9-POTSR		
	M.Boucaud	18/06/2021	1:8	1/1